


SHOWER ROOM Model 9007

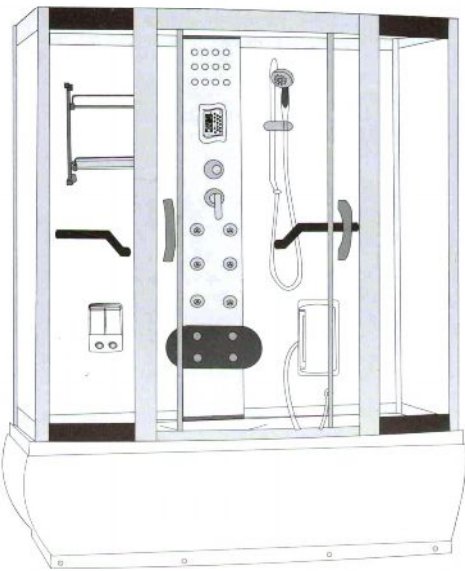


Model 9007 SHOWER ROOM

Cautions in installation and using

- Thank you for selecting our bathroom series. To guarantee safety and normal operation of products as well as prolong the service life, please pay attention to the following cautions:
1. After opening the case, read this introduction carefully, check all the packed parts, examining the shower cabinet for transportation company, so you may have to contact the transportation company directly to report damage.
 2. You should make sure that the floor is leveled and solid and will be able support the total weight of the unit and its occupant. You should also consult your local building codes on questions on installation compliance standards.
 3. Install all of the required plumbing and drainage before securing the shower.
 4. Please insure that prior to the installation the floor is leveled and the walls are at right angles. While some adjustment in leveling of the tray is possible, irregular floor level or improper angle of side walls will result in serious problems for your installation.
 5. Assembled initially is not close. Diately all screws and nuts must be serewed tightly before using.
 6. The socket of steam generator shall adopt qualified product with > 25A capacity. Otherwise the contact may be overheated and cause fire.
 7. After using, client shall turn off power feeder switch to avoid long-term energizing in the system and speeding up the aging.
 8. Use clean water, if the water source is not clean enough, filtration is needed.
 9. Telephone line shall not be installed in parallel with other telephone set. (additional active deconcentrator shall not be installed, otherwise the quality of telephone communication will be lowered or no sound can be heard.)
 10. Do not Use too much strength when install or make use of towel holder, holder and sliding bar.
 11. Immediately steam bath after drinking, acute sports or steam bath in the morning, inadvisable.
 12. Temperature difference between locker room and bathroom should not vary widely.
 13. Shower time should not be too long, 15-20 minutes are suitable. Leave at once if feel uncomfortable. ping, massage or steam bathes are not suitable for pregnant women, or people who suffering from heart disease, high blood pressure or diabetes.

SHOWER ROOM

Model 9007

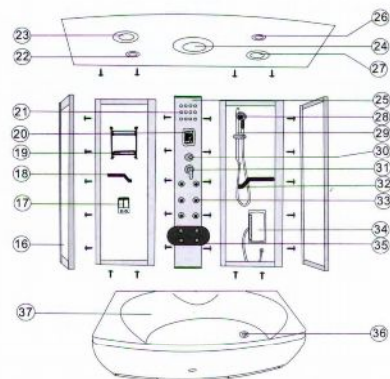

- 16. side glass
- 17. soap mixture box
- 18, 32. towel holder
- 19. holder
- 20. computer control
- 21. background lamp
- 22, 26. top light
- 23, 27. fan
- 24. top shower
- 25. aluminum panel
- 28. handle shower
- 29. sliding bar
- 30. switch
- 31. cold&hot water switch
- 33. back massaging
- 34. feet massaging
- 35. backrest
- 36. drain
- 37. tub

2

Model 9007

SHOWER ROOM

No.	Accessories	Quantity
1	Nuts	32pcs
2	Handles	2pairs
3	Wrench	1pc
4	Wheels	8pcs
5	4*16 dish screws	34pcs
6	4*10 screws	22pcs
7	4*25 dish screws	8pcs
8	Drill	1pcs



- 10 Bigger rail 1pc
- 11 Smaller rail 1pc
- 12 Aluminum panel
- 13 Inside connector
- 14 Connector
- 15 Frame


3

SHOWER ROOM Model 9007

Installation steps:


1. Tub installation:

Adjust the feet and use the spirit level to make sure the drain at the lowest position. Tighten the screws of feet. Then insert the drain into drainage outlet.

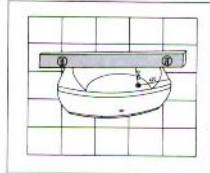


2. Glass room installation:

1. Use one 15, one 13, one 11 and one 10 aluminum to connect with bigger fixed door. Use 4*16 screws to fix them. Put the plastic seal in the blind side between glass and aluminum; Fix another side in the same way.

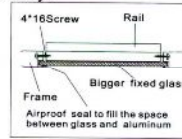

2. Use 4*16 screws to connect one 10, one 11 and two 13 aluminum alloy. Form an aluminum frame.

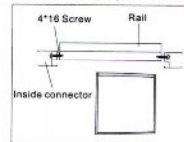

4


Model 9007

SHOWER ROOM


3. Use 2 pcs 14 aluminum alloys to connect 2 fixed glass and aluminum frame., form a U-type glass room.



5. Install movable doors with wheels. Install handles, waterproof seal and magnetic seal.

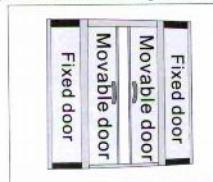

4. Use 19 aluminum alloy to fasten the fixed glass into the rail. Fasten the small aluminum panel with 4*25 screw. Fill the space with airproof seal.

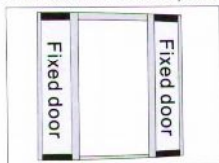

3. Backboard Installation

1. Connect aluminum panel and 2 glass backboard with 4*10 screw.




5

SHOWER ROOM

Model 9007

2. Put the glass room & backboard on the tub. Connect with 4*16 screw. Fill the space between them with T-type airproof seal.

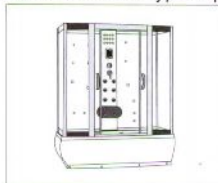

3. Install the holder & other accessories of backboard. Connect the pipe complying with marks.



4. Top Installation

Connect top & backboard with 4*16 screw. Keep the edge of top adhere to the bigger rail.



5. Connect fan, top light & speaker complying with the marks on the wires.

6. Try the water & electricity source, then tidy up the protection film of tub & top.

6

Model 9007

SHOWER ROOM

Cleaning and Maintenance

1. For routine cleaning of steam bathroom, use ordinary detergent and soft cloth. Do not use the detergent that contains acetone or alcohol. In cleaning, do not use the disinfectant that contains formic acid and formaldehyde. If any besmirch is left by rubber sealant, wipe it gently using soft cloth with little gasoline.
2. Should any scratch be found at the surface, sandpaper it with water using 1500# waterproof abrasive paper, then apply toothpaste and polish the surface with soft cloth.
3. To remove scale incrustation on the surface of frame, wipe it using soft cloth with the detergent containing light acid such as lemon juice or vinegar.
4. Gilt and chrome ---plate part needs no frequent wiping.
5. Do not use utensil of rough surface and detergent containing chemical solution or grain to wipe the frame.
6. Do not strike the frame with blunt or knife.

7

